

SEMPRE®

COLOUR WATCH



Model examples

 
 
 
AUS

Made in China
SEMPRE® is a registered trademark of ALDI Stores
DISTRIBUTED BY:
ALDI STORES
1 SARGENTS ROAD
MINCHINBURY NSW 2770
www.aldi.com.au



AFTER SALES SUPPORT 58326
1 800 130 489
service@protel-service.com
MODEL: AA8-CW-100, AA8-CW-108, AA8-CW-116, AA8-CW-200A, AA8-CW-200B, AA8-CW-200C, AA8-CW-200D, AA8-CW-220 11/2018

Dok./Rev.-Nr.: ALDIAUCW218_BA_V1

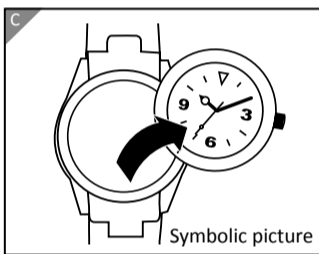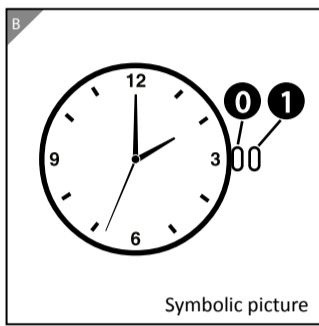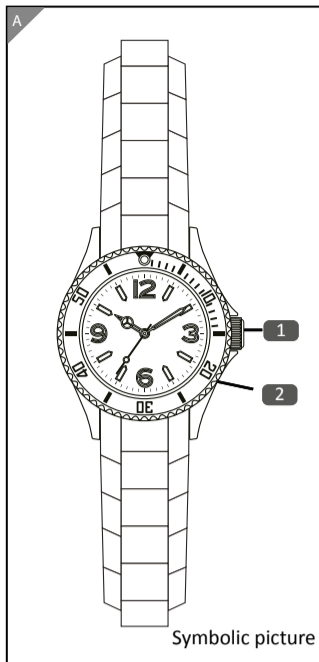

degree of risk which may lead to death or severe injury if not avoided.

NOTICE!

This signal word warns against potential damages to property.



WARNING: Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns.

If swallowed, go straight to a hospital emergency room. Dispose of used batteries immediately.



This symbol provides you with useful supplementary information on use.

SAFETY

Proper use

The colour watch is intended exclusively for indicating the time. It is only intended for private use and not suitable for commercial purposes.

Only use the colour watch as described in this user manual. Any other use is considered improper and may result in damage to property.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

Safety instructions



Do not ingest battery, Chemical Burn Hazard.

- This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Danger of suffocation!

The colour watch contains small parts and is shipped with protective films. Children could swallow them when playing and suffocate.



Keep the small parts and protective films away from children.



Danger for children and persons with impaired physical, sensory or mental capacities (e.g. partially disabled persons, older persons with reduced physical and mental capacities) or lack of experience and knowledge (e.g. older children).

- This colour watch may be used by children ages eight and over as well as persons with impaired physical, sensory or mental capacities or those lacking experience and knowledge if they are supervised or have been instructed in how to safely use the colour watch and have understood the risks associated with operating it.
- Children must not play with the colour watch. Cleaning and user maintenance must not be performed by unsupervised children.

You can find more information as well as this user manual at www.krippel-watches.de



Risks associated with batteries!

The colour watch contains a button cell battery. Handling the battery improperly poses the risk of explosions or serious internal injuries.

- Store both new and used button cell batteries so that they are not accessible to children.
- If you suspect that a button cell battery has been swallowed or otherwise incorporated, promptly consult a physician.
- Only have the battery replaced with the same battery type.
- If you suspect a child has swallowed a button battery,

go to a hospital emergency room immediately. Do not let the child eat or drink and do not induce vomiting. (Emergency Telephone Number: 000 and Poisons Information Centre: 13 11 26).

- Do not touch leaky batteries. If you do happen to come into contact with battery acid, wash the affected area thoroughly with plenty of clean water. If battery fluid comes into contact with your eyes or triggers a skin response, you should also seek medical attention.
- If it is no longer possible to securely close the battery compartment with the case cover, dispose of the colour watch as described in the chapter "Disposal".
- Do not charge or reactivate the batteries, do not disassemble them, do not dispose of them in fire and do not short circuit them.
- Dispose of batteries at your collection point.

NOTICE!

Risk of damage!

Improper handling of the colour watch may result in damage.

- Do not use the colour watch if it exhibits visible damages.
- Do not place any heavy objects on the colour watch.
- Protect the colour watch from extreme temperatures and dust.
- Do not let the colour watch fall down, do not expose it to shocks and impacts and do not apply pressure to the watch.
- Do not immerse the colour watch in water or other liquids for a prolonged period of time (see the chapter "Water resistance").
- Always have the battery changed by a specialist.

CHECKING THE COLOUR WATCH

NOTICE!

Risk of damage!

Carelessly opening the packaging with a sharp knife or other sharp object may damage the watch or its accessories.

- Please be careful when opening the packaging.
- Take the colour watch out of the packaging.
 - Remove the packaging and the protective foil from the colour watch. Keep the packaging materials away from children and dispose of the materials in an environmentally friendly manner.
 - Check whether the colour watch is complete and the watch is undamaged (see Fig. A).
 - If this is not the case, do not use the colour watch. Contact the service address provided on the warranty card.

HANDLING



Model AA8-CW-200A, AA8-CW-200C and AA8-CW-200D: Remove the watch case from the silicone strap (see Fig. C). Insert it again later.

By factory default, the colour watch has already been set to the correct time. If you would like to set it to a different time, follow the steps below.

- Pull the crown (1) out of the watch to position 1 (see Fig. A + B).
- Turn the crown until the hands are set to the current time.
- Push the crown back to position 0 to initiate time measurement (see Fig. A + B).



Model AA8-CW-100, AA8-CW-108, AA8-CW-116, AA8-CW-200B, AA8-CW-220: The bezel (2) indicates the minutes in increments of ten.

WATER RESISTANCE

The colour watch is water resistant up to 50 m. The following table provides information on which activities and conditions the colour watch is suitable for.

The specification of meter refers to the air overpressure used in connection with the water resistance test for the colour watch in accordance with DIN 8310.

The colour watch is suitable for every-day activities, such as showering or washing hands.

Water resistant to	Rain, splashes	Washing hands	Showering	Bathing, Swimming	Water sports
50M WATER RESISTANT	Yes	Yes	Yes	No	No

REGISTER YOUR PURCHASE AT

www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT
PRODUCT INFORMATION

PACKAGE CONTENTS/PARTS

- Crown (see Fig. A)
- Bezel (only for models AA8-CW-100, AA8-CW-108, AA8-CW-116, AA8-CW-200B and AA8-CW-220, see Fig. A)
Button cell battery 1.55 V Type SR626SW (already inserted)

ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to the nearest ALDI store within 60 days from the date of purchase, for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.

GENERAL INFORMATION

Reading and storing the user manual



This user manual accompanies this colour watch. It contains important information on start-up and handling. Before using the colour watch, read the user manual carefully.

This particularly applies to the safety instructions. Failure to heed this user manual may result in severe injury or damage to the colour watch. Store the user manual for future use. If you pass the colour watch on to third parties, please be absolutely sure to include this user manual.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the colour watch or on the packaging.



This signal symbol/word designates a hazard with moderate

NOTICE!

We recommend not wearing the colour watch in the sauna since condensate may build-up due to temperature differences and thus damage the watch mechanism.

- Pressure peaks may occur during swimming movements or under a water jet (e.g. during showering or washing hands). Under these conditions the affected areas are subjected to significantly higher mechanical stresses than the immersion depth would initially suggest. Only for classifications from 50 m can a colour watch be justifiably considered water resistant (showering possible). For classifications from 100 m it is possible to also wear a colour watch during swimming.
- However, water resistance is not a lasting property, as the integrated sealing elements may deteriorate in function due to daily use or may become damaged due to an impact or being allowed to fall.
- If a colour watch is exposed to great temperature differences, for example going for a swim in cool water after sunbathing, condensate may form inside the housing. This is not necessarily indicative of water leaks but it is mandatory to promptly remove the moisture.

CLEANING


NOTICE!

Risk of damage!

Improper cleaning may damage the colour watch.

- Do not immerse the colour watch in water or other liquids (see chapter "Water resistance").
- Do not use any aggressive cleaners, sharp or metallic cleaning utensils such as knives, hard scrapers or similar items. They could damage the surfaces.
- Clean the front and back side of the colour watch with a soft, damp, lint-free cloth or a soft brush.

TECHNICAL DATA

Battery: 1 x 1.5 V battery
Type SR626SW
(1 x 1.5 V  SR626SW)

CHANGING THE BATTERY

A special tool is required to change it. When changing the battery, make sure that the polarity (+/-) is correct. Always have the battery changed by a watch expert.

DISPOSAL

Disposing of packaging

Dispose of the packaging sorted according to type. Dispose of cardboard with waste paper recycling and leave films with your recyclables collection point.

Disposing of old devices

Should the colour watch no longer be capable of being used at some point in time, dispose of it in accordance with the regulations in force in your city or state. Please ensure your recycling information applies to the local regulations.

Batteries and rechargeable batteries must not be disposed of with household waste.

As the end user you are required by law to bring all batteries and rechargeable batteries, regardless whether they contain harmful substances* or not, to a collection point run by the communal authority or borough or to a retailer, so that they can be disposed of in an environmentally friendly manner.

* labelled with: Cd = cadmium, Hg = mercury, Pb = lead

CUSTOMER Service

Please note: For organizational reasons, we **cannot accept any unannounced packages** not prepaid. Please **use our service home page first** or contact us through the e-mail address below or the toll-free **service hotline**.

Please have the **model no.** ready, which can be found either **on the back or on the bottom** of the product.

 service@protel-service.com

 Toll-free service hotline
1 800 130 489



Colour Watch


Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 24 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 (AUS) 1 800 130 489

 service@protel-service.com



Colour Watch

Repair and Refurbished Goods or Parts Notice

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1 800 130 489 or write to us at:


QSL

Rear Unit 11, Slough Business Park, 2 Slough Avenue (Off Rachael Close) Silverwater
NSW 2128, AUSTRALIA

1 800 130 489 (Mon-Fri 08:00 am - 08:00 pm)

service@protel-service.com

AFTER SALES SUPPORT

 (AUS) 1 800 130 489

 service@protel-service.com

